

Magnetic Tracklight Remote Pairing Instructions

Remote control overview



There are 12 channel buttons per remote for pairing for up to 12 groups of lights.

How to Pair Remote?

- a) Insert tracklight fixtures into track rail and keep the lights OFF




- b) Turn light ON and press a chosen channel button rapidly immediately (at least 5 times)



c) Tracklight will blink 3 times when pairing is successful.



d) Repeat for other group of lights with different channel as needed.

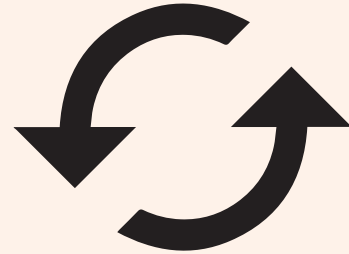

How to Unpair Remote?

a) Insert tracklight fixtures into track rail and keep the lights OFF



b) Turn light ON and press red "OFF" button rapidly immediately (at least 5 times)



c) Tracklight will blink 3 times when unpairing is successful.



d) All light channel programmed in remote previously will be cleared